


Guideline on How to Paint your Bath

You will need:

Bath	Sugar Soap Liquid or
Fine Wet & Dry Sandpaper	Degreasant Agent
All Surface Spray Paint or	Masking Tape
Eggshell Oil Based Paint	Roller or Brush
Plastic Primer or Standard	Dust Sheets
Primer	

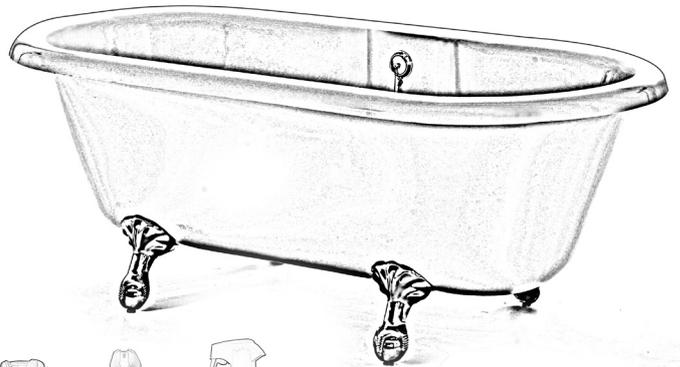

Recommended Primers, Paints & Cleaners



Painting Instructions

- (1) For a superior finish you need to prepare the surface of the bath so that the paint adhere's to the surface. Firstly you need to key the acrylic on the bath, lightly abrade the acrylic using fine wet and dry sandpaper. Using wet and dry soaked in water reduces any clogging and is best for a perfect smooth finish.
- (2) Make sure when painting your bath that the room is well-ventilated and dust free.
- (3) Place your bath on top of a dust sheet to protect your floor.
- (4) Use masking tape to cover protected areas (Acrylic inner).
- (5) Ensure surfaces to be painted are free from dust.
- (6) Before priming clean the surface with sugar soap liquid or a degreasant agent.
- (7) If spray-painting use a plastic primer. If using an oil based paint use a standard primer. For best results, apply a second coat of primer, lightly abrade the surface of the bath after applying the first coat.
- (8) When primer has dried paint the bath using spray paint or oil based paint.
- (9) On selection of your paint, follow the manufacturer's painting instructions.
- (10) Please apply light even coats when applying all paints to avoid any drips or runs.
- (12) Do not fit the feet to the bath until the paint is totally dry.
- (13) Remove masking tape and clean using warm soapy water.

Caring for your bath

Your Royce Morgan Bath

- Royce Morgan baths are made using two pieces of 5mm sanitary grade acrylic sheets.
- Both the inner and outer acrylic skins are then reinforced using resin bonded glass fibre strands.
- When the resin is cured it sets solid to give both acrylic skins an improved strength and rigidity.
- They are both then coated with thermal sheets so that the water in the bath has a longer heat retention.
- The inner and outer skins are then bonded together using a polyester based cast giving it a solid base.

How to care for your bath

- It is recommended each time you use your bath, to cover the base of the bath with cold water before turning on the hot tap.
- For everyday cleaning we recommend using a soft damp cloth or just warm soapy water.
- You should never use abrasive cleaners on your bath, they will scratch the surface of the acrylic, which will affect the appearance of the glossy look.
- If you do scratch your bath, we recommend using an enamel cleaning agent or car polish (T-Cut), this will help to restore your bath back to a lustre finish.
- Replace worn washers on dripping taps to prevent surface marking.
- **Warning** – Solvents such as paint stripper or nail varnish remover will damage the bath.